


VG3-640/540

COLOR AND PRODUCTIVITY IN PERFECT HARMONY

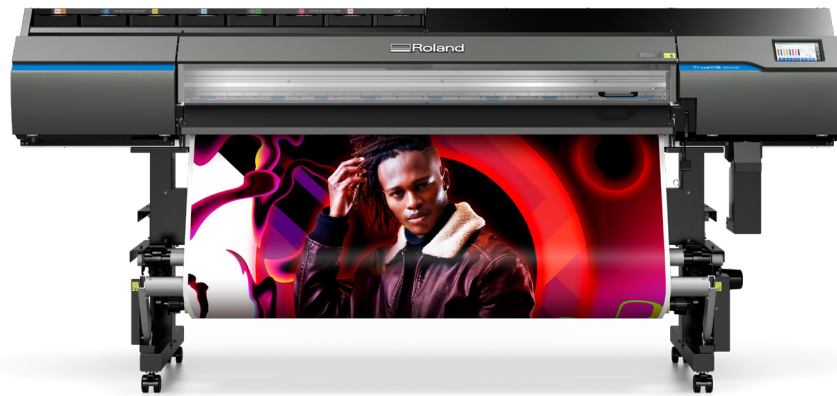

ECO-SOLVENT

INTEGRATED
PRINT/CUT

UP TO 8-COLOR
CONFIGURATION

TR

The most advanced generation of TrueVIS

- ▶ FlexFire print heads, TR2 inks, and True Rich Color combine with user-friendly features to make the VG3 the ultimate in professional print graphics production.
- ▶ A re-designed chassis, high-quality components, and a variety of media handling improvements make the VG3 perfect for unattended printing of short runs, long runs, print/cut, and so much more.

U

Enhanced features—
with you in mind

- ▶ Easy-to-operate, and intuitive 7" LCD touchscreen control panel.
- ▶ Automated media calibration saves time and material.
- ▶ Newly designed, adjustable media take-up unit accommodates rolls of different sizes.
- ▶ One-touch media clasp makes loading media rolls easy for a single operator.



Expanded color output

- ▶ Available ink configurations to meet your customers needs—from brand accurate colors and high-end graphics to high-productivity jobs .
- ▶ Combine Orange and Green inks to push the color boundaries of digital printing.
- ▶ New CMYK plus light cyan, light magenta, orange, and green inks—combined with True Rich Color 3 deliver vivid, smooth, and color rich graphics.

Additional Features

- + VersaWorks 6 RIP Software is included with every VG3—featuring new True Rich Color 3 preset, new Nearest Color Finder, and new Variation job function.
- + Roland DG Connect App ready—giving you instant access to important data about print jobs as well as your business.
- + A variety of available ink configurations expand your gamut to output rich color, smooth gradations, and beautiful skin tones.
- + Perforated sheet cut option reduces post-processing with “easy tear” perforations between print jobs.

Technical Specs

		VG3-540	VG3-640
Size		54 inch	64 inch
Dimension		104 x 29 x 52 in. (2,632 x 748 x 1,320 mm)	114 x 29 x 52 in. (2,886 x 748 x 1,320 mm)
Media	Width	11.7 to 54 in. (297.2 to 1,371 mm)	13.2 to 64 in. (335.3 to 1,625 mm)
	Thickness	Max. 39 mil (1.0 mm) with liner, for printing Max. 15.7 mil (0.4 mm) with liner and 8.6 mil (0.22 mm) without liner, for cutting	
	Roll outer diameter	Max. 9.8 in. (250 mm)	
	Roll weight	Max. 77 lb. (35 kg)	Max. 99 lb. (45 kg)
	Core diameter	3 in. (76.2 mm) or 2 in. (50.8 mm)	
Ink	Colors	Ten colors (Cyan, Magenta, Yellow, Black, Light Cyan, Light Magenta, Light Black, Orange, Green, White)	
	Capacity	500 ml pouch (TR2), 250 ml pouch (TR2 White)	
	Configurations	CMYK (TR2) CMYKLcLmLkOr (TR2) CMYKLcLmLkWh (TR2) CMYKLkOrGrWh (TR2) CMYKLkOrGr (TR2) CMYKLcLmOrGr (TR2)	
Control panel		7 in. touchscreen display	
Resolution		Max. 1,200 dpi	
RIP (included)		VersaWorks	
Cutting	Cut pressure	500 gf	
	Cut speed	0.39 to 11.8 in/s (10 to 300 mm/s)	
Output (in standard mode)	4 Colors	12.8 m ² /h	12.2 m ² /h
	8 Colors	7.6 m ² /h	7.3 m ² /h
Take-up Unit		Included	



Built to build your business and engineered to a higher standard, the TrueVIS VG3 is supplied with a Two-Year Trouble-Free Warranty* for added peace-of-mind.

*Registration within 60 days of purchase and continuous exclusive use of Roland DG ink during the first two years of ownership are required to qualify for the free second year of limited warranty coverage.